



Heat Pump Freeze Protection Valve Set

Method:


FP15-35-ST series antifreeze valve set can accurately sense the ambient temperature and water temperature, intelligently drain circuit medium-water near 4 °C without electricity power and manual interfere.

Application

Working with monoblock heat pump, the antifreeze valve can automatically judge the operation state of the system. When the system is shut down or power off unexpectedly, the antifreeze mode can be opened in time: when the valve sense the temperature drops to 3°C, the valve will drain water to prevent system freezing.

With the decrease of water temperature, the antifreeze valve can automatically increase the drainage speed, effectively balance the heat loss in the system. The valve will be automatically closed when the water temperature rises to 4 °C.

Dimensions:

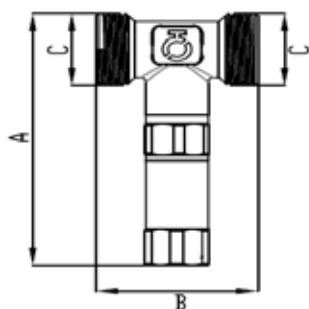

A	B	C
107	58	1"
115	58	1 1/4"
121	58	1 1/2"

Specifications:

Product Name	Model	Port Size	Body Material	Open/Close Temp (°C)	Ambient Temperature (°C)	Maximum Pressure (MPa)	Straight Flow Rate (Cv)	Discharge Flow Rate (Cv)	Net Weight (g)
Freeze Protection Valve Set for Heat Pump	FP15G-35 1"ST	Male 1"	Brass	1~4	-30~65	0.6	10	0.6	256
Freeze Protection Valve Set for Heat Pump	FP15GD-35 1 1/4"ST	Male 1 1/4"	Brass	1~4	-30~65	0.6	16	1	280
Freeze Protection Valve Set for Heat Pump	FP15GD-35 1 1/2"ST	Male 1 1/2"	Brass	1~4	-30~65	0.6	25	1	300

The Installation of Antifreeze Valve Sets

- 1) It is recommended to install antifreeze valve sets connected with both pipes (flow and return) of outdoor heat ex-changer of the heat pump (as shown in the figure). Otherwise, freeze protection may fail due to negative pressure inside the water system when antifreeze valve drains water.
- 2) The antifreeze valve shall be installed vertically downward, the one connected with inlet pipe should be installed in the lowest position of the outdoor system.
- 3) The antifreeze valve shall be installed outdoor, at the position that can sense the lowest temperature of the system, and shall not be installed near the heat source which could interfere with proper function.
- 4) In order to reduce the water discharge by antifreeze valve, the water pipeline and antifreeze valve sets shall be same insulated.
- 5) Do not make any trap connections.
- 6) It is not recommended to connect the drainage pipe behind the antifreeze valve. This may cause the failure of antifreeze due to freeze blocking the drainage pipeline.

Freeze Protection Valve Replacement

In the event of a malfunction, the Freeze Protection Valve (1) can be replaced.

An automatic shut-off cock (2) prevents the water from draining while the cartridge is being replaced, thereby keeping the system pressurised.

